


For 3" wide frame

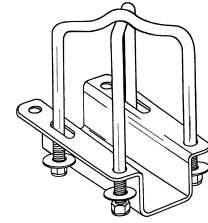

For 2" wide frame

INSTALLING ROLLER STYLE BOAT GUIDE

P/N 27610

1. Place u-bolts as shown above for either 2" wide or 3" wide frame
2. Use 1 flat u-bolt and 1 formed u-bolt with washers and nuts to loosely attach each u-shaped bracket under or on top of trailer frame at desired locations.
3. Insert a guide-on upright post into each of the u-brackets to the desired width.
Do not fully tighten bolts.
4. Make sure the upright posts are seated level in the u-brackets before completely tightening the u-bolts. Finish tightening the u-bolt connections.
5. Insert a black plastic cap on top of each upright post.

TOOLS REQUIRED = 2-- 9/16" WRENCHES

NOTE:
 If desired, use P/N 27630A galvanized w/rollers bracket kit for raised mounting of trailer tail lights

PARTS INCLUDED	
2---Galv tube assemblies w/rollers	27612PG
2---Galv. U-brackets	27603PG
2---Black plastic caps	11332
8---3/8"-16 Nylon locknuts	10810
8---3/8" USS flat washers	10960
2---3/8"-16 x 3-1/2" x 5" U-bolts	15258
2---3/8"-16 x 3-1/2" x 5" Formed u-bolts	15259